

Forum FOH

User Manual

Klark Teknik Building
Walter Nash Road
Kidderminster
Worcestershire
DY11 7HJ

Tel: +44 (0) 1562 741515

Fax: +44 (0) 1562 745371

Email: info@uk.telex.com

Website: www.ddaconsole.com

Forum FOH User Manual
© Telex Communications (UK) Limited

In line with the company's policy of continual improvement, specifications and function maybe subject to change without notice. This Operator Manual was correct at the time of writing. E&OE.

Contents

DECLARATION OF CONFORMITY	3
INTRODUCTION	4
SAFETY PRECAUTIONS	5
TRANSPORT	6
ATTENTION	6
WARRANTY	7
SPECIFICATIONS	9
GLOSSARY	11
MODULE DESCRIPTIONS	16
MONO INPUT MODULE	18
MONO MUTE INPUT	23
STEREO INPUT MODULE	25
THE STEREO MUTE INPUT MODULE	31
THE DUAL EFFECT RETURN MODULE	32
6 INTO 1 MICROPHONE INPUT	34
THE DIGITAL STEREO INPUT MODULE	36
10 WAY SELECTOR MODULE	41
THE STANDARD OUTPUT MODULE	44
THE MATRIX OUTPUT MODULE	49
COMPOSER OUTPUT MODULE	53
STEREO MASTER MODULE	57
GENERAL SERVICING	61
POWER SUPPLY	62

Declaration of Conformity

The Manufacturer of the Products covered by this Declaration is

Klark Teknik Building, Walter Nash Road, Kidderminster, Worcestershire, DY11 7HJ.

The Directives Covered by this Declaration.

89/336/EEC Electromagnetic Compatibility Directive, amended by 92/31/EEC & 93/68/EEC

73/23/EEC Low Voltage Equipment Directive, amended by 93/68/EEC.

The Products Covered by this Declaration.

Equipment type	Product Name	Variants
Audio Mixing Console	Q2	Q2 VCA
Audio Mixing Console	Q2 Monitor	Meterbridge
Audio Mixing Console	QMR	Meterbridge
Audio Mixing Console	FMR	
Audio Mixing Console	Forum	PA,Matrix,Mute
Audio Mixing Console	Forum Monitor	Meterbridge
Audio Mixing Console	XL200	
Audio Mixing Console	XL250	

The Basis on which Conformity is being Declared

The products identified above comply with the protection requirements of the EMC Directive and with the principal elements of the safety objectives of the Low Voltage Directive, and the manufacturer has applied the following standardsQ

EN 55013 Q 1990

Limits and methods of measurement of radio disturbance characteristics of Broadcast Receivers and Associated Equipment.

EN 50082-1 Q 1992


Electromagnetic Compatibility - Generic Immunity Standard Part 1. Residential, commercial and light industry.

EN 60065 Q 1994

Safety requirements for mains operated electronic related apparatus for household and similar general use.

The technical documentation required to demonstrate that the products meet the requirements of the Low Voltage Directive has been compiled by the signatory below and is available for inspection by the relevant enforcement authorities. The CE mark was first applied in 1996.

SignedQ



G.M.Squires

AuthorityQ

Product Support Manager.

DateQ

1st, January 1997.

Attention

The attention of the specifier, purchaser, installer, or user is drawn to special measures and limitations to use which must be observed when these products are taken into service to maintain compliance with the above directive. Details of these special measures and limitations to use are available on request, and are also contained in product manuals.

INTRODUCTION

The Forum console is a high quality console, designed for use in live sound and recording applications. Two output modulesR a standard output module and a matrix output module are available, along with a number of input modules as follows Q-

- ▣ mono standard input and mono mute input
- ▣ stereo input and stereo mute input
- ▣ dual effect return
- ▣ digital stereo input
- ▣ 10 way selector
- ▣ 6 into 1 microphone module

The Forum is normally supplied as a FORUM P.A. or as a FORUM MATRIX and the frame will accommodate up to 60 modules. Normally the master module, a double blank module and the 8 output modules will occupy 12 of those positions with the remainder being available for input modules. An 8 module wide frame extender can be fitted where additional modules are required on an existing console or to increase the maximum frame size to 68 modules.

SAFETY PRECAUTIONS

IMPORTANT - PLEASE READ BEFORE INSTALLING YOUR FORUM CONSOLE

Strong sources of electromagnetic radiation e.g. high power cabling, video monitors and radio transmitters may cause degradation of the audio quality due to induced voltages in the chassis and connection leads. Site the console away from such sources. For the same reason it is advisable to site the power supply away from the console.

- ❑ Electronic components are susceptible to conditions of excessive heat or extreme cold so take care not to use your console under such conditions.
- ❑ Before powering up the console make sure that the power supply voltage selection matches the local mains supply.
- ❑ Never connect or disconnect the power cable with out switching off the power supply. Similarly switch off the console before removing or servicing modules.
- ❑ Do not attempt to wipe clean the console with a cleaning liquid. Most surfaces can be simply cleaned with a soft dry brush. Should the chassis or channel ident strips need cleaning use only water or an alcohol. Solvent based products should not be used as they will damage these parts.

If you spill any liquids in the console e.g. coffee on the faders switch off the power supply immediately. Consult you authorised dealer before attempting any cleaning.

TRANSPORT

We recommend that you retain all the packing from your FORUM console should you ever need to return it for service or move the console to other premises.

If the console has to be moved regularly then we suggest that you purchase a foam lined flight case available from your distributor if you cannot purchase one locally.

Only use the power supply and cables provide. Your warranty is invalidated if other supplies or cables are used.

If you experience any problem with the local mains, or during thunder storms, switch off the power supply and unplug it from the mains supply.

ATTENTION

CABLES

This product should only be used with high quality, screened twisted pair audio cables, terminated with metal bodied 3-pin XLR connectors. The cable shield should be connected to Pin 1. Any other cable type or configuration for the audio signals may result in degraded performance due to electromagnetic interference.

ELECRIC FIELDS

Should this product be used in an electromagnetic field that is amplitude modulated by an audio frequency signal (20Hz - 20Khz), the signal to noise ratio may be degraded. Degradation of up to 60dB at a frequency corresponding to the modulation signal may be experienced under extreme conditions (3V/m, 90%

WARRANTY

If within a period of twelve months from the date of delivery of the equipment to the End User it shall prove defective by reason only of faulty materials and/or workmanship (but no faulty design) to such an extent that the effectiveness and/or the usability thereof is materially affected, the Equipment or the faulty component shall be returned to the Distributor or DDA and subject to the following conditions the Distributor or DDA will repair or at its option replace the defective components. Any components replaced will become the property of DDA.

Any Equipment or component returned will be at the risk of the End User whilst in transit (both to and from the Distributor or DDA) and postage and/or freight charges must be prepaid.

This Warranty shall only be available ifQ-

- i) The Equipment has been properly installed in accordance with the instructions contained in this manual.
- ii) The End User has notified the Distributor or DDA in writing within 14 days of the defect appearing.
- iii) No persons other than authorised representatives of DDA or the Distributor have effected any replacement of parts, maintenance adjustments or repairs to the Equipment.
- iv) The End User has used the Equipment for such purposes as DDA recommends with only such operating supplies as meet DDA's specifications or approval and otherwise in all respects in accordance with DDA's recommendations.

Defects arising as a result of the following are not covered by this Warranty Q -

Faulty or negligent handling, chemical or electro-chemical or electrical influences, accidental damage, Acts of God, neglect, deficiency in electrical power, air conditioning or humidity control.

Benefit of this Warranty may not be assigned by the End User.

End Users who are consumers should note that their rights under this Warranty are in addition to and do not affect any other rights to which they may be entitled against the seller of the Equipment.

DDA shall not be liable for any damage caused to persons or property due to Q-

- i) Incorrect usage of the Equipment
- ii) Other equipment attached to the Equipment, which is not approved by DDA
- iii) Modifications made by non-authorized persons, or by using non-recommended parts, or incorrectly made.

In no circumstances shall DDA be liable for any indirect or consequential costs, damages or losses (including loss of business profits, operating time or otherwise) arising out of the use or inability to use the product, whether or not the likelihood of damage was advised to DDA or its distributor.

Fuses and lamps are specifically excluded from this warranty.

This notice does not affect your statutory rights.

SPECIFICATIONS

Note Q All specifications relate to dBu, ie 0dBu = 0.775V RMS

Maximum Gain

Mic Input to Mix OutputQ	86dB
Line Input to Mix OutputQ	30dB

Frequency Response

Mic Input to Mix OutputQ Pgain 55dB)	20Hz , -0.50dB 20kHz, -0.20dB
---	----------------------------------

Line Input to Mix Output Pgain 0dB)	20Hz , -0.50dB 20kHz, -0.20dB
--	----------------------------------

Noise, DIN Audio Weighted

Microphone Input Gain 55dB, EIN Ref 200 Ohm	S-127.5dBu
--	------------

Line Input to Mix Output Gain 0dB, 16 inputs routed	S-84dBu
--	---------

Distortion

Microphone Input to Mix Output -50dBu input, +4dBu output	S0.005%
--	---------

Line Input to Mix Output +4dBu input, +4dBu output	S0.005%
---	---------

Crosstalk

Adjacent Channel, 1kHz	S-100dBu
------------------------	----------

Group to Mix, 1kHz	S-78dBu
--------------------	---------

Fader Attenuation, 1kHz	S-85dBu
-------------------------	---------

Panpot Isolation, 1kHz	S-72dBu
------------------------	---------

GLOSSARY

This section provides a simple explanation of some of the terms used when describing the console features.

1/4" GAUGE JACK

This is a 1/4" jack which has a large tip diameter compared with a 1/8" gauge jack which has a smaller diameter tip and is usually found in broadcast use.

AFL

After fade listen. For listening to post fade signals.

AUXILIARY SENDS

These are extra signal paths out of the console which are separate from the main mix and group outputs. Each auxiliary output is like a separate mixer and can be controlled independently of the main faders. They are used to provide special mixes to artistes as they are recording (normally called FOLDBACK) or as a signal to be sent to an effect such as a reverberation or delay device.

BUS

This is the term used to describe the summing or mixing of a number of signals. A number of signals routed to the same bus will appear as one signal at the output of the bus mixing amplifier.

BUS TRIM

A control used to adjust the level of all signals going to a Group Output.

CHANNEL PATH

The path used by the signal going to tape in an in-line console.

D.I.

Direct Inject is an input used for high level devices such as keyboards where the line input would not be sensitive enough.

DIM

This reduces the monitor level by a preset amount, usually 20dB in DDA products.

DIRECT OUTPUT

This refers to the individual output of a channel which is available even if the channel is not routed.

EBO

Electronically Balanced Output.

EQ

Equalizer or Tone Control.

FOLDBACK

This is the signal which is usually fed to the artistes headphones.

GROUND SENSING OUTPUT

An output stage where any ground noise is injected into the feedback loop in such a way that it appears on the amplifier output. As the ground should be the reference for the following stage, if it is moving and the signal is moving in the same way then no net signal results.

GROUP OUTPUT

An output usually routed to a multi-track tape recorder input. This output is derived from a bus and one group output stage is required for each bus. PDMR12 excepted)

HF

High Frequency

HIGH PASS FILTER

A filter which cuts out frequencies below its operating frequency. It can be used to filter out rumble picked up by a microphone for example.

INSERT POINT

Sometimes referred to as a patch point. This is an interruption to the signal path to allow for the insertion of a signal processing device. In an in-line console such as the DCM it can be in either the mix or channel path Pswitchable).

LF

Low Frequency.

LINE INPUT

An input designed to accept high level signals as opposed to microphone level signals. The expected level is usually +4dB but increasingly inputs and outputs are being designed so that they can be altered to operate at -10dBV which is now quite a common operating level.

LOW PASS FILTER

This is the inverse of a HIGH PASS filter and is used to reduce frequencies above the operating frequency

MASTER

This normally refers to the main stereo output section which controls the level of the stereo mix and associated functions such as monitoring.

MIX PATH

The path used by the signal going to the stereo mix.

PARAMETRIC EQ

An equaliser section which has variable frequency, level and Q.

PAN

A pan control or Pan Pot or Panoramic Potentiometer is used to spread a mono signal across a stereo bus. In the centre the signal is reduced by 4.5dB to compensate for the effects of summing to mono.

PEAKING EQ

In this form of equaliser the response is tailored to enhance a selected frequency relative to the frequencies above and below it. Peaking equalisers are normally used as the mid sections of an equaliser.

PFL

Pre-fade listen. For listening to pre fade signals.

PRE

A signal derived before a fader and therefore not dependant upon the position of the fader.

POST

A signal derived after a fader and therefore dependant upon the position of the fader.

Q

Associated with peaking equalisers the Q is the factor which describes how wide the peak or trough of enhancement is. The smaller the Q the wider the bandwidth of the equaliser will be. Typically a fixed Q equaliser will have a Q of about 1.5 equating to a bandwidth of about 1 octave.

QUASI BALANCED

An arrangement whereby a bus is terminated with a differential input. The bus however is not truly balanced, instead a bus common is used to pick up any interference which will also be picked up by the true bus. The interference then appears as a common mode signal at the mixing amplifier.

RETURN

Any signal that is sent out of the console and is returned after some form of processing.

ROUTING

The sending of a signal to a bus normally by pressing a switch. Signal can be routed to several buses simultaneously if required.

SEND

The output from a channel insert point is called the send.

SHELVING EQ

This means that the response of the equaliser becomes constant after the turnover or corner frequency has been passed. Thus a high frequency shelving equaliser operating at 10k will have a rising response as the frequency approaches 10k but will be flat after 10k. This is normally used on the high and low frequency sections of an equaliser.

SLATE

The ability to talk to tape from the operating position of the console. On the DCM it is possible to slate both the multi-track group outputs and the stereo mix bus.

SIP

Solo in Place

SWEEP FREQUENCY

A control which selects a centre frequency to operate around. Most often used with peaking equalisers but it can also be used to determine the roll off point of shelving EQs as well.

VCA

Voltage Controlled Amplifier. An amplifier whose gain can be controlled by a DC Voltage applied to its control port.

XLR

The XLR Pin fact a specific manufacturer's model reference) is an industry standard connector of high quality and is normally used for balanced signals, primarily microphones and balanced outputs. The most common is a three pin version, although there are types with more pins for ther purposes.

MODULE DESCRIPTIONS

The input modules are provided with rear panel connectors for Microphone (on XLR), and Line (Pjack), both balanced. Insert send and return signals are available on a single stereo jack socket, and are unbalanced. A Direct Output, unbalanced and ground sensing, is also available via a jack socket on the rear panel.

Wiring of the XLR and jack connectors follows normal conventions, so that compatibility with existing cables is provided where possible.

XLRQ	Pin 1 Pin 2 Pin 3	Ground Signal +ve (Hot) Signal -ve (Cold)		
Jack	Line	Insert	Direct Output	
Tip	Hot (+ve)	Send	Hot (+ve)	
Ring	Cold	Return	Ground Sense	
Sleeve	Ground	Ground	Ground	

Blanking panels are fitted to the main chassis to allow the fitting of multiway connectors. Consult your authorised dealer for more information.

All balanced XLR inputs are wired to the international standard of Pin 2 HOT. If you need to connect unbalanced equipment to inputs or outputs, wire the cold terminal to Pin 3 for XLRs or the Ring for jacks.

The microphone input is suitable for use with balanced, low impedance microphones (150-200 ohms).

Do not use dynamic, unbalanced or battery powered microphones with the +48 volt phantom power switched on as damage to the microphone may result.


The gain of this section is variable from 6dB to 76dB, to give an output of +4dB at the stereo mix outputs. This corresponds to a sensitivity of -20dBu to -72dBu.

With the gain control at minimum, the maximum input level is +14dBu without the 20dB pad.

The gain of the line input may be adjusted from -10dB to +20dB corresponding to a sensitivity of +14dBu to -16dBu to give an output of +4dBu at the stereo mix outputs.

The impedance of the line input is approximately 20Kohms, so instruments with high impedance outputs such as electric guitars are best fed through a DI box to the microphone input to avoid being loaded down by the line input impedance.

MONO INPUT MODULE

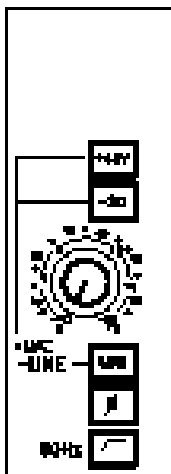

+48V

Provides 48 volt phantom power for a condenser microphone, or DI box. Optional balancing transformers may be fitted on the Mic input.

PAD

Switching in PAD inserts a 20dB attenuator in circuit with the microphone input. This may be used when high-output microphones are employed, or to enable the use of the mic input for line-level signals.

GAIN

The gain control is a wide range rotary potentiometer, and is active on both Mic and Line Inputs. On Mic, the gain can be adjusted from 6dB to 76dB. For Line inputs, the adjustment is from -10dB to +20dB.

LINE


The LINE switch selects the signal on the line input socket to feed the channel path when it is down. In this case, the Mic signal is disconnected.



The PHASE REVERSE switch inverts the phase of the selected input, Mic or Line, to allow compensation for different wiring standards.

FILTER

The Filter switch inserts a 80Hz highpass filter with a rolloff of 12dB per octave into circuit after the input amplifier. This may be used to eliminate unwanted low-frequency noises such as rumble, or camera buzz.

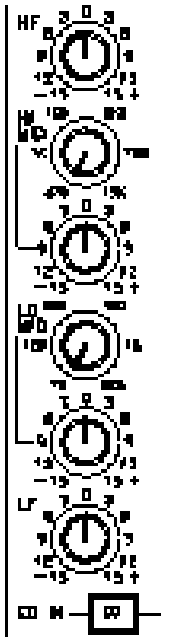

EQUALISER

The equaliser on the mono input module is a four band design, incorporating two sweepable peaking mid-range sections and fixed frequency shelving high and low controls.

HF

Shelving section, providing +/-15dB of gain at 12kHz.

HI MID

Peaking section, providing +/- 15dB of gain, at frequencies from 470Hz to 15kHz.

LO MID

Peaking section, providing +/- 15dB of gain, at frequencies from 70Hz to 2.2kHz.


LF

Shelving section, providing +/- 15dB of gain at 50Hz.

EQ IN

The EQ switch inserts the entire equaliser circuit into circuit. When switched out, the equaliser is totally bypassed, keeping the signal path to a minimum.

The Insert point is located after the EQ section.

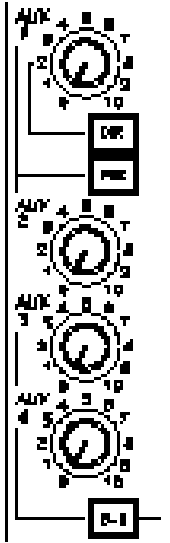

AUXILIARIES

The Forum console has six auxiliary buses, accessed on the Standard Input module from 4 controls. In addition, the channel direct output may be controlled via one pot, to provide extended auxiliary sends.

AUX 1

Controls the level of the channel signal fed to the Aux 1 bus. This signal is normally post-fader, unless the PRE button, just below, is depressed.

DIR

Re-routes the signal on the Aux 1 control to feed the Channel Direct output. The signal no longer feeds the Aux 1 bus, and can be used either as an additional single effects send, or as a feed to a multitrack, for example.

PRE

Feeds the Aux 1 and Aux 2 controls with a signal taken pre-fader, instead of post-fader. In this case, the signal on the Aux 1 & 2 buses is unaffected by the position of the channel fader.

AUX 2

Controls the level of the channel signal fed to the Aux 2 bus. This signal is normally post-fader, unless the PRE button, just above, is depressed.


AUX 3

Controls the level of the channel signal fed to the Aux 3 bus, and is internally linkable to be pre or post-fader. When the 5-6 switch is depressed, this control feeds the Aux 5 bus instead of the Aux 3 bus.

AUX 4

Controls the level of the channel signal fed to the Aux 4 bus, and is internally linkable to be pre or post-fader. When the 5-6 switch is depressed, this control feeds the Aux 6 bus instead of the Aux 4 bus.

NoteQ DIR, PRE, and 5-6 are local to the module, they do not affect signal flow on any other module than the one on which they are located.

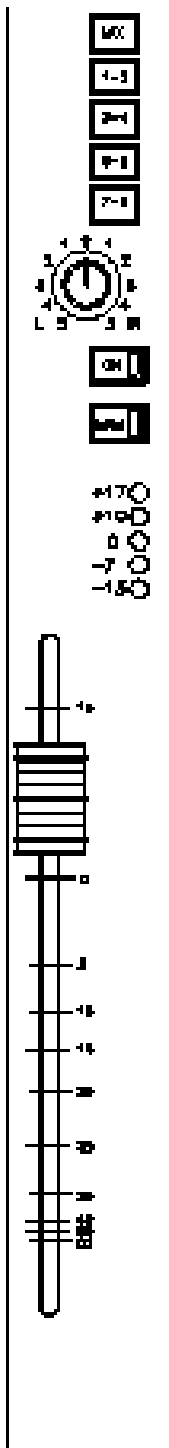

ROUTING AND STATUS

MIX

Routes the post-fade, post-pan channel signal to the stereo mix bus.

1-2 P3-4, 5-6, 7-8)

Routes the post-fade, post-pan channel signal to output buses 1 and 2 P3 & 4, 5 & 6, 7 & 8).

PAN

When PAN is set to centre, equal levels are sent to both buses, with a 4.5dB drop relative to fully clockwise or anti-clockwise. Setting the PAN control fully anticlockwise sends full level to the Left/1/3/5/7/buses, cutting the send to the Right/2/4/6/8 buses. Fully clockwise rotation sends full level to the Right/2/4/6/8 buses, cutting the feed to Left/1/3/5/7.

ON


The ON switch enables the channel signal path, and is indicated by an led in the switch when the channel is active. When OFF, all post-fade auxiliary sends and routing assignments are muted.

PFL

The PFL button (or SOLO) feeds the post-EQ, pre-fader signal to the Monitor section (loudspeakers or headphones), replacing the selected monitor source. The main stereo output of the console is not affected. The red led in the PFL switch will illuminate when the PFL function is active. PFL signals from different sources that are active simultaneously will be summed.

A five segment led signal meter shows when signal is present, above a threshold of -13dBu, and will show peak signals up to +17dBu. If the top led is on partly or continuously, the signal is close to clipping, or severe distortion, and the channel gain should be reduced.

The fader is the main signal level control for the channel, and is a long-throw type which gives smooth control of the channel level.

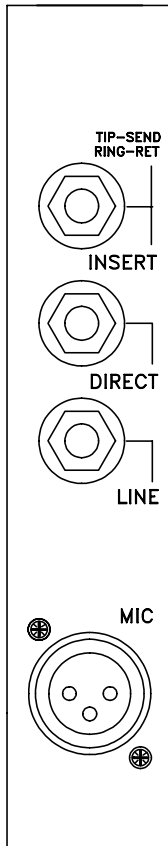

CONNECTORS AND PIN DEFINITIONS


Mic Input Q 3 Pin XLR type, Balanced
 Nominal Input LevelQ -72dBu to -2dBu
 Pin 2 Q Signal +ve P(Hot)
 Pin 3 Q Signal -ve P(Cold)
 Pin 1 Q Ground
 Input Impedance Q >2 kOhm

Line Input Q 1/4O TRS Jack Socket, 24 Gauge, Balanced
 Nominal Input LevelQ -16dBu to +14dBu
 Tip Q Signal +ve P(Hot)
 Ring Q Signal -ve P(Cold)
 Sleeve Q Ground
 Input Impedance Q >10 kOhm

Insert Point Q 1/4O TRS Jack Socket, 24 Gauge, Unbalanced
 Nominal Input/Output levelQ -2dBu
 Tip Q Insert Send
 Ring Q Insert Return
 Sleeve Q Ground
 Output ImpedanceQ 575 Ohm
 Input Impedance Q >10 kOhm

Direct Output Q1/4O TRS Jack Socket, 24 Gauge, Ground
 Compensated
 Nominal Output levelQ -2dBu
 Tip Q Signal
 Ring Q Signal Ground P(Ground Compensated)
 Sleeve Q Ground
 Output ImpedanceQ 575 Ohm

MONO MUTE INPUT

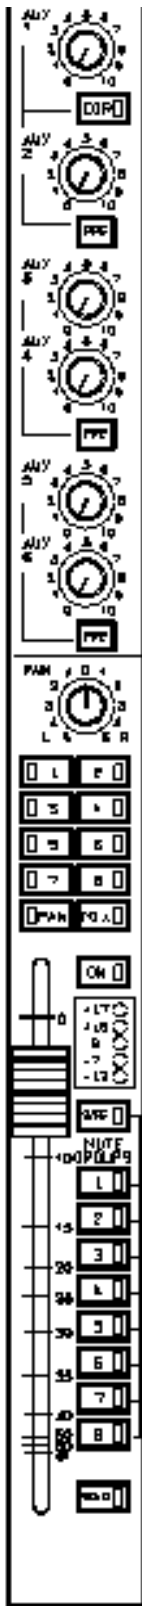

The input and equaliser sections on this module are the same as those on the Mono Standard Input Module. The differences occur in the remainder of the module as follows.

AUXILIARIES 1 and 2

Independent level control is provided for these two auxiliaries with a common switch to select the prefade signal as the source. Internal jumpers are available to further select the prefade signal between the pre and post equaliser signal. Auxiliary 1 can be used to control the direct output of the channel by depressing the DIR button. If PRE is also selected then the direct output will be independent of the channel fader position and can be totally controlled by the AUX 1 level control.

AUXILIARIES 3 and 4

Independent level control is provided for these two auxiliaries with a common switch to select the prefade signal as the source. Internal jumpers are available to further select the prefade signal between the pre and post equaliser signal.

AUXILIARIES 5 and 6


Independent level control is provided for these two auxiliaries with a common switch to select the prefade signal as the source. Internal jumpers are available to further select the prefade signal between the pre and post equaliser signal.

ROUTING

Independent routing is provided to the 8 audio groups and the PAN control can be used to pan signal across odd and even buses.

MUTE GROUPS

There are 8 mute group switches which will assign the channel to one or more of the 8 mute groups. The mute grouping is independent of the audio grouping and a mute group can of course traverse audio groups. Thus when a master mute is operated all channels assigned to that mute group will cut although they may be assigned to different audio groups. The muting on this module is carried out electronically and thus there is the possibility of using other remote control systems such as the DDA Midi Mute system. The SAFE button can be used to prevent a channel from responding to a master mute without de-assigning it.

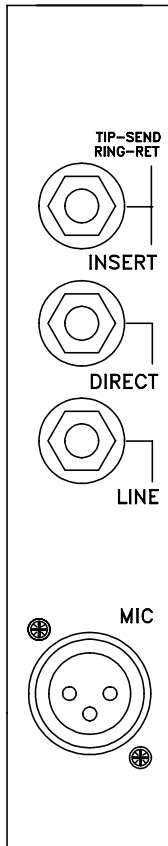

CONNECTORS AND PIN DEFINITIONS


Mic Input Q 3 Pin XLR type, Balanced
 Nominal Input LevelQ -72dBu to -2dBu
 Pin 2 Q Signal +ve P(Hot)
 Pin 3 Q Signal -ve P(Cold)
 Pin 1 Q Ground
 Input Impedance Q >2 kOhm

Line Input Q 1/40 TRS Jack Socket, 24 Gauge, Balanced
 Nominal Input LevelQ -16dBu to +14dBu
 Tip Q Signal +ve P(Hot)
 Ring Q Signal -ve P(Cold)
 Sleeve Q Ground
 Input Impedance Q >10 kOhm

Insert Point Q 1/40 TRS Jack Socket, 24 Gauge, Unbalanced
 Nominal Input/Output levelQ -2dBu
 Tip Q Insert Send
 Ring Q Insert Return
 Sleeve Q Ground
 Output ImpedanceQ 575 Ohm
 Input Impedance Q >10 kOhm

Direct Output Q1/40 TRS Jack Socket, 24 Gauge, Ground Compensated
 Nominal Output levelQ -2dBu
 Tip Q Signal
 Ring Q Signal Ground P(Ground Compensated)
 Sleeve Q Ground
 Output ImpedanceQ 575 Ohm

STEREO INPUT MODULE

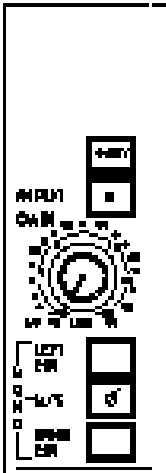

The Stereo Input module has two stereo input sources. Input A is for a stereo Microphone, while input B is for a line-level stereo input, which can be optionally configured as a phono (RIAA equalised) input by purchasing the RIAA adapter card. Sum-and-Difference, or MS decoding is provided either at Mic or line level signals using a combination of the mono and phase reverse switches.

+48V

Switches 48 volt phantom power to the Mic input A.

INPUT B

Selects the source on the input B connectors. Normally this is a line input, but may be internally adapted to be a phono input from a turntable using the RIAA adapter.

GAIN

The Gain control is wide range rotary control, and is active on both inputs A and B. On input A (PMic), the gain is adjustable from 16 to 66dB, while on input B (PLine or Phono), the gain range is from -10 to +20dB.

LEFT CUT

This switch mutes the left channel signal, so only the right channel signal is heard.

RIGHT CUT

This switch mutes the right channel signal, so only the left channel signal is heard.


MONO

When both Left Cut and Right Cut switches are pressed, the input signal is combined to give a mono signal, which is fed to both signal paths through the module.

PHASE REVERSE

Under normal conditions, this reverses the phase of the right channel.

If both the CUT switches above are pressed, additionally pressing Phase Reverse will allow the input to be used for MS decoding, either from a microphone or line level signal.

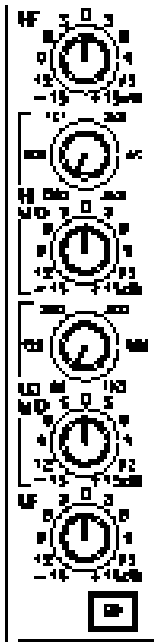

EQUALISER

The equaliser on the stereo input module is a four-band design with two swept mids, and shelving high and low frequencies.

HF

Shelving section, providing +/-15dB of gain at 12kHz.

HI-MID

Peaking section, providing +/-15db of gain, at a centre frequency adjustable from 470Hz to 15kHz.


LO-MID

Peaking section, providing +/-15db of gain, at a centre frequency adjustable from 95Hz to 1.1kHz.

LF

Shelving section, providing +/-15dB of gain at 50Hz.

Auxiliaries The FORUM console has six Auxiliary buses, accessible on the input module via 4 controls. On the Stereo Input module, the Aux buses are fed from a mono sum of the left and right channels.

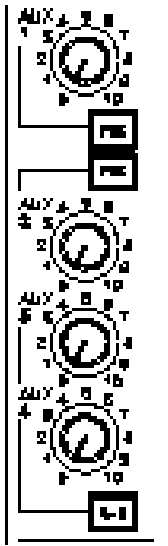

AUX 1

Controls the level of the channel signal fed to the Aux 1 bus. This signal is normally post-fader, unless the PRE button just below the AUX 1 control is pressed.

PRE

Feeds the AUX 1 control with a signal taken pre-fader instead of post-fader. In this case, the signal fed to the Aux 1 bus is unaffected by the position of the channel fader.

AUX 2

Controls the level of the channel signal fed to the Aux 2 bus. This signal is normally post-fader, unless the PRE button just above the AUX 2 control is pressed.

PRE


Feeds the AUX 2 control with a signal taken pre-fader instead of post-fader. In this case, the signal fed to the Aux 2 bus is unaffected by the position of the channel fader.

AUX 3

Controls the level of the channel signal fed to the Aux 3 bus, and can be linked internally to be pre or post-fader. When the 5-6 switch is pressed, this control feeds the Aux 5 bus.

AUX 4

Controls the level of the channel signal fed to the Aux 4 bus, and can be linked internally to be pre or post-fader. When the 5-6 switch is pressed, this control feeds the Aux 6 bus.

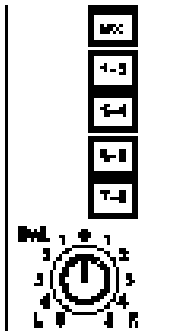

ROUTING

When any routing button is pressed, the BAL control is automatically inserted into circuit, allowing the signal to be balanced in the stereo image. If the channel is selected to mono (see Left/Right Cut switches) the Balance control will operate in a similar manner to the Pan control on mono inputs, but with a limited range of control ($P\pm 3\text{dB}$).

MIX

Routes the post-fade, post-bal signal to the stereo mix bus.

1-2

Routes the post-fade, post-bal signal to output buses 1 and 2.

3-4

Routes the post-fade, post-bal signal to output buses 3 and 4.

5-6


Routes the post-fade, post-bal signal to output buses 5 and 6.

7-8

Routes the post-fade, post-bal signal to output buses 7 and 8.

BAL

When BAL is set to its centre, equal levels are sent to both buses, with a 3 dB drop relative to fully clockwise or anti-clockwise. Setting the BAL control fully clockwise sends a level of 3dB higher on the right bus and a level of 3dB lower on the left bus.



ON

The ON switch enables the channel signal path, and is indicated by an LED in the switch when the channel is active. When OFF, all post-fade auxiliary sends and routing assignments are muted.

PFL


The PFL button (or SOLO) feeds the post-EQ, pre-fader signal to the monitor section (loudspeakers or headphones), replacing the master signal. The main stereo output is not affected. The red LED in the PFL switch illuminates when the PFL function is active. PFL signals from different sources that are active simultaneously are summed.

SIGNAL METER (LED)

A five segment LED signal meter shows when a signal is present above a threshold of -13dBu, and will show peak signals of up to +17dBu. If the top led is on partly or continuously, the signal is close to clipping. The meter shows the higher of the left or right channel signals.

STEREO FADER

The fader is the main signal level control for the channel, and is a long-throw type which gives smooth control of the channel level.

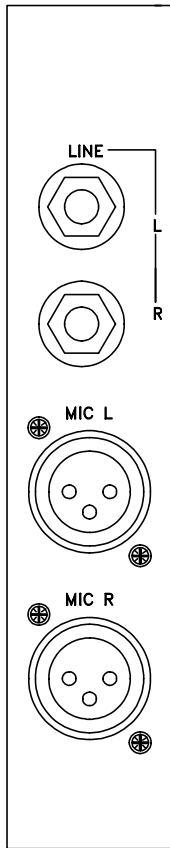

CONNECTORS AND PIN DEFINITIONS

Input AQ Mic Input Q 3 Pin XLR type, Balanced

Nominal Input LevelQ -72dBu to -2dBu

Pin 2 Q Signal +ve P(Hot)

Pin 3 Q Signal -ve P(Cold)

Pin 1 Q Ground

Input Impedance Q >2 kOhm

Input BQ Line Q 1/4O TRS Jack Socket, 24 Gauge, balanced

Nominal Input levelQ -16dBu to + 14dBu

Tip Q Signal +ve P(Hot)

Ring Q Signal -ve P(Cold)

Sleeve Q Ground Input ImpedanceQ >10 kOhm

Input B can also accept Phono P(RIAA) signals with the optional RIAA card fitted.


RIAA Input sensitivity Q 2mV at maximum gain RIAA Input

Impedance Q 47 kOhm / 100pF

THE STEREO MUTE INPUT MODULE

This module is identical to the standard stereo input module other than for the addition of the 8 mute group switches. These switches assign the channel to one or more mute groups and will cause the channel to CUT if the master cut for the assigned mute group is operated. The mute groups do not have to be the same as the audio groups and great flexibility can be achieved by having different assignments. A SAFE switch is provided to prevent a channel from responding to a master cut while retaining the assignment.

THE DUAL EFFECT RETURN MODULE

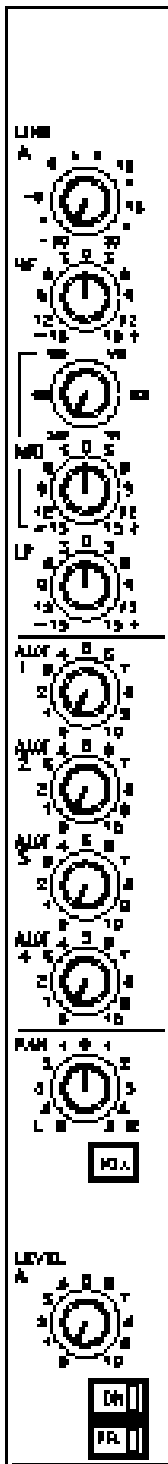

This module contains two independent signal paths which can be used to bring line level signals down onto the stereo mix bus of the console. As both signal paths are identical it is only necessary to describe one.

GAIN

This adjusts the gain of the input between -10dB and +20dB.

HF

Provides +/-15dB of gain at 12kHz for high frequency equalisation.

MID

A gain control provides +/-15dB of gain over the frequency range extending from 240Hz to 7kHz. A second control determines the frequency of operation.

LF

Provides +/-15dB of gain at 50Hz for low frequency equalisation.

AUX 1, AUX 2

The controls determine the level of signal sent to auxiliaries 1 and 2. The signal will normally be Pre-fade/Post-EQ but internal links allow either Pre-fade/Pre-EQ or Post Fader to be selected.

AUX 3, AUX 4

Similar to AUX 1 and 2 but the default signal is Post-fader. Internal links allow the Pre-fade/Post-EQ and Pre-fade/Pre-EQ signals to be selected. Note that no routing is possible to auxiliaries 5 and 6.

PAN

Pans the signal across the stereo bus.

LEVEL


Controls the signal level onto the stereo bus.

ON

Allows the signal to the stereo bus to be cut. This also affects the post fader auxiliary signals.

PFL

Places the Post Fader or Pre-Fade/Post EQ signal onto the solo bus. The default signal is Prefade.

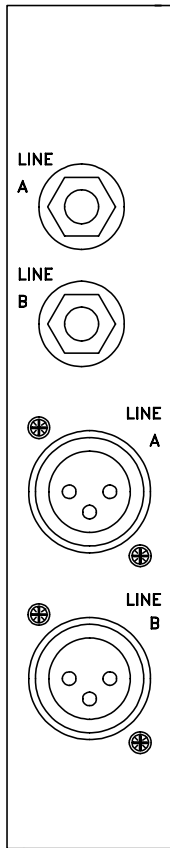


CONNECTORS AND PIN DEFINITIONS

Line Input Q 3 Pin XLR type, Balanced
 Nominal Input LevelQ -16dBu to +14dBu
 Pin 2 Q Signal +ve P(Hot)
 Pin 3 Q Signal -ve P(Cold)
 Pin 1 Q Ground
 Input Impedance Q >10 kOhm

Line Input Q TRS Jack Socket, 24 Gauge, Balanced
 Nominal Input LevelQ -16dBu to +14dBu
 Tip Q Signal +ve P(Hot)
 Ring Q Signal -ve P(Cold)
 Sleeve Q Ground
 Input Impedance Q >10 kOhm

6 INTO 1 MICROPHONE INPUT

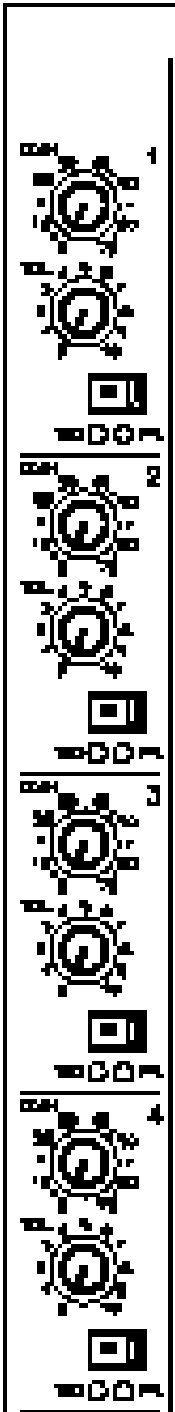

Six microphone inputs are available on this dual width module. Individual gain and level controls and an ON switch are available to each input.

GAIN

The gain of a microphone input can be adjusted from 6dB to 76dB.

VOL

This adjusts the level of any input before being mixed with the other input signals.

ON

This allows an input signal through to the remainder of the module.

SIG


Indicates the presence of signal above. The internal signal level of the module will be about -18dBu when this indicator comes on.

PEAK

Indicates that the signal level is approaching clipping and that the gain should be reduced. The internal signal level of the module will be about +12dBu when this indicator comes on. The maximum signal level inside the module is +20dBu and thus about 6dB of headroom is left when the PEAK led is on.

Both the above indicators are located after the gain control stage but before the VOL control.


The remainder of the module is identical to a standard mono input module as described on page 17.

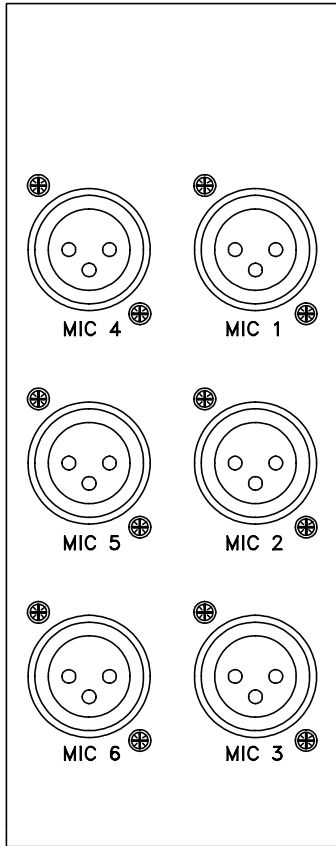

CONNECTORS AND PIN DEFINITIONS

Mic Input Q 3 Pin XLR type, Balanced
 Nominal Input LevelQ -72dBu to -2dBu
 Pin 2 Q Signal +ve P(Hot)
 Pin 3 Q Signal -ve P(Cold)
 Pin 1 Q Ground
 Input Impedance Q >2 kOhm

THE DIGITAL STEREO INPUT MODULE

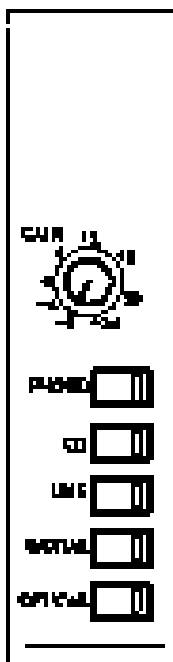

The Digital Stereo Input module accepts any one of 3 analog or 2 digital stereo signal sources. The signal source is selected by electronically latching push-buttons.

Three pairs of phono/cinch (RCA) connectors are provided for the 3 analog signal sources (Phono, CD, Line). Digital signals from CD players and DAT recorders may be fed into the module directly via a coaxial connector or an optical connector.

For the coaxial connector we recommend a 75 ohm cable, and for the optical input a special fibre-optic cable is required.

Both Digital inputs process the SPDIF (Sony-Philips Digital Interface) Hi-Fi standard format. It is possible to internally set which of the inputs is selected when the console is switched on.

GAIN

The gain control is a wide range rotary potentiometer with a range of 30dB, so that the different output levels of the sources may be adapted to the input.

PHONO

Selects the Stereo Phono (RIAA equalised) input as the source for the channel. All other sources are switched off.

CD

Selects the Stereo CD input as the source for the channel. All other sources are switched off.

LINE


Selects the Stereo Line input as the source for the channel. All other sources are switched off.

DIGITAL

Selects a digital stereo signal from the co-axial digital input. At the same time a D/A converter is looped into the signal path. All other sources are switched off.

OPTICAL

Selects a digital stereo signal from the optical digital input. At the same time a D/A converter is looped into the signal path. All other sources are switched off.

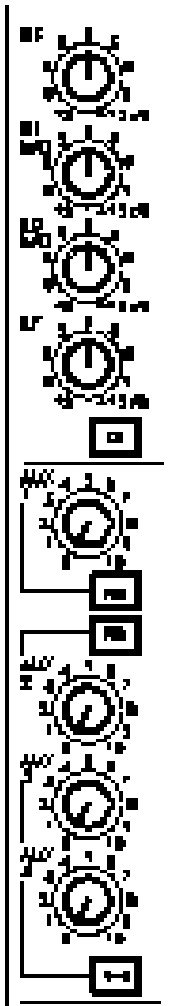

STEREO EQUALISER

The Digital Input EQ is a four-band design.

HF

Shelving section, providing +/-12dB of gain at a frequency of 12kHz.

HI MID

Peaking (Pbell) section, providing +/-12dB of gain at a centre frequency of 3kHz.

LO MID

Peaking (Pbell) section, providing +/-12dB of gain at a centre frequency of 300Hz.

LF

Shelving section, providing +/-12dB of gain at a frequency of 50Hz.

EQ IN

The EQ switch inserts the entire equaliser into the circuit. When switched out, the equaliser is totally bypassed.

Auxiliaries

The Digital Stereo input can feed all 6 auxiliary buses.


AUX 1

Controls the level of a mono sum of the channel signal fed to the AUX 1 bus. This signal is normally post-fader, unless the PRE button just below the AUX 1 control is pressed.

AUX 2

Controls the level of the channel signal fed to the AUX 2 bus. This signal is normally post-fader, unless the PRE button just above the AUX 2 control is pressed.

NoteQ Internal links allow the AUX 1 control to send the left channel signal and AUX 2 the right channel. This gives a stereo AUX output. The signal is post-fader, and the PRE switches then have no function.

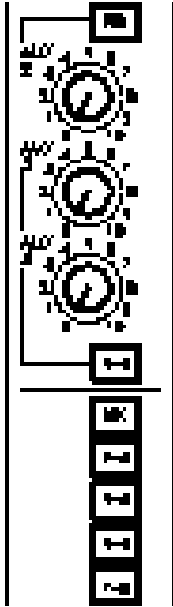

AUX 3

Controls the level of the mono sum of the channel signal fed to the AUX 3 bus. Internal links determine whether the feed is pre or post-fader.

AUX 4

Controls the level of the mono sum of the channel signal fed to the AUX 4 bus. Internal links determine whether the feed is pre or post-fader (paired with Aux 3).

5-6

Switches the Aux Controls 3 and 4 to feed Aux buses 5 and 6.

ROUTING

When any routing button is pressed, the BAL control is automatically inserted into circuit allowing the signal to be balanced in the stereo image.

MIX

Routes the post-fade, post-BAL stereo channel signal to the main stereo (Left/Right) mix bus.

1-2

Routes the post-fade, post-BAL stereo channel signal to group buses 1 and 2.

3-4


Routes the post-fade, post-BAL stereo channel signal to group buses 3 and 4.

5-6

Routes the post-fade, post-BAL stereo channel signal to group buses 5 and 6.

7-8

Routes the post-fade, post-BAL stereo channel signal to group buses 7 and 8.

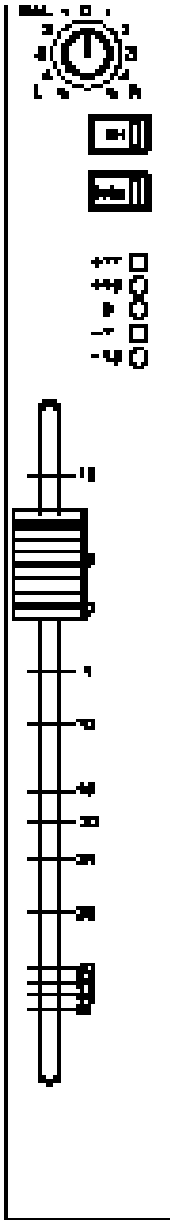

BAL

When BAL is set to centre, equal levels are sent to both buses, with a 3dB drop relative to fully clockwise or anti-clockwise. Setting the BAL control fully clockwise sends a level of 3dB higher on the right bus and a level of 3dB lower on the left bus.

ON

The ON switch enables the channel signal path, and is indicated by an led in the switch when the channel is active. When OFF, all post-fade auxiliary sends and routing assignments are muted.

PFL


The PFL (or SOLO) button feeds the post-EQ, pre-fader signal to the monitor section (loudspeakers or headphones), replacing the master signal. The main stereo output of the console is not affected. The red led in the PFL switch illuminates when the PFL function is active. PFL signals from different sources that are active simultaneously are summed.

SIGNAL METER

A five segment LED signal meter shows when a signal is present above a threshold of -13dBu, and will show peak signals up to +17dBu. The meter displays the higher signal of the left or right channels.

STEREO FADER

The fader is the main signal level control for the channel, and is a long-throw type which gives smooth control of the channel output.

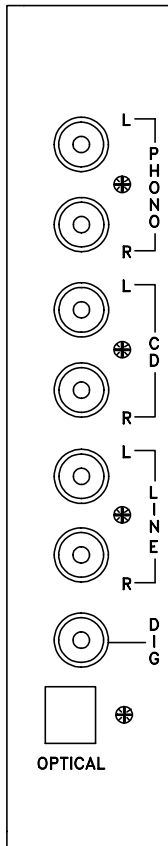

CONNECTORS AND PIN ASSIGNMENTS

Line Input Q Cinch/Phono/RCA, unbalanced PCD, Line)

Nominal Input Level Q -20dBu to +10dBu

Phono Tip Q Signal PHot)

Phono OuterQ Ground

Input Impedance Q >10 kOhm

Phono Input PRIAA) Q Cinch/Phono/RCA, unbalanced

Nominal Input level Q -54dBu to -24dBu

Phono Tip Q Signal PHot)

Phono OuterQ Ground

Input Impedance Q 47 kOhm / 100pF

Digital Input Q Optical / Co-axial


Nominal Input Level Q -28dBFS to 0dBFS

Digital Interface Q SPDIF

D/A Converter Q 18 bit / linear

Oversampling Q 8 Times

10 WAY SELECTOR MODULE



This module provides additional inputs for the 2 TRK position of the monitor selection switch on the master module. An EDAC connector is used to provide the 10 stereo input connections while 2 male XLR connectors provide outputs which can then be connected by external cables to the 2 track input of the master module.

The module could also be used as a 10 way source selector for the stereo input module for example.


Each button is associated with an identification strip to allow for source labelling.

An alternative version of this module, fitted with female XLR connectors may be used to expand the Monitor Output of the console for use with other monitoring systems.

EDAC TABLE FOR Q EXTERNAL SELECTOR MODULE

PAIR	+ , -	DESCRIPTION
1	d,f	1 LEFT
2	V,Z	1 RIGHT
3	K,P	2 LEFT
4	C,D	2 RIGHT
5	A,B	3 LEFT
6	F,E	3 RIGHT
7	R,L	4 LEFT
8	W,s	4 RIGHT
9	b,a	5 LEFT
10	h,e	5 RIGHT
11	k,l	6 LEFT
12	v,p	6 RIGHT
13	z,u	7 LEFT
14	KK,DD	7 RIGHT
15	LL,EE	8 LEFT
16	MM,F	8 RIGHT
17	JJ,NN	9 LEFT
18	CC,H	9 RIGHT
19	t,y	10 LEFT
20	j,n	10 RIGHT

THE STANDARD OUTPUT MODULE

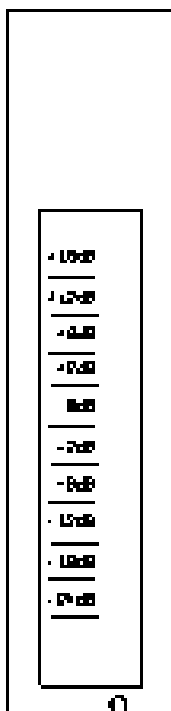


The FORUM Group Output Module supplies the Group Output signal, and also two return inputs, for use with multitrack tape machines, or external effects devices. The group outputs are electronically balanced, but may also be transformer balanced as a cost-option.

Return A is permanently routed to the stereo mix. Return B can be routed to the stereo mix, or to the sub-group bus. The group output can be routed to the return B input. The Return B section can be used either in 'PA' mode, or 'Recording' mode. These modes are described under the appropriate section below. An Insert point is provided in the group signal path, which allows the connection of external processing devices such as limiter/compressor units. The Insert connector is on the rear panel of the Group module, and plugging in the jack automatically breaks the normal signal path and inserts the external device.

LED METERING

The twenty segment led meter reads the signal present on the Group output, or the pre-EQ signal present at the return input B. This latter signal may be the return signal, or the group signal, depending on the setting of the PA/RECORDING mode switch. The metering reads post-fader when reading group signals so will vary with fader position. In TAPE mode, it will read the actual signal present before the level control of the return section (PB). An internal link allows the meter to display with average (PVU) or peak (PPM) characteristics.

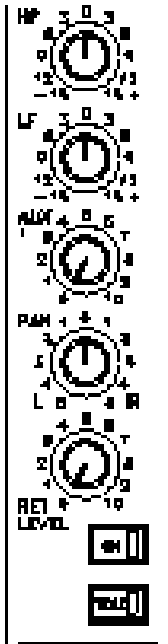

RETURN SECTION A Pto stereo mix)

EQUALISER

The two band equaliser features +/- 15dB of gain at 8kHz (PHF), and 60Hz (PLF), with a shelving characteristic on each band.

AUX 1

The return signal (PA) can be fed to the Aux 1 bus via this level control, allowing the tape return signal to be fed to an external processing device or artist headphone monitoring system. The signal feed is taken pre the level control, and is therefore unaffected by the position of the return level pot.

PAN

Positions the return signal within the stereo image, with a 4.5dB relative drop in the centre.

RET LEV


This is the level control for the return signal, and adjusts the amount of level sent to the stereo mix.

SOLO

The return signal may be soloed to the monitoring system. This solo signal is pre- the return level control. The led in the switch illuminates when solo is pushed.

ON

The ON switch enables the Return A signal to the stereo mix bus, and has led indication when enabled.

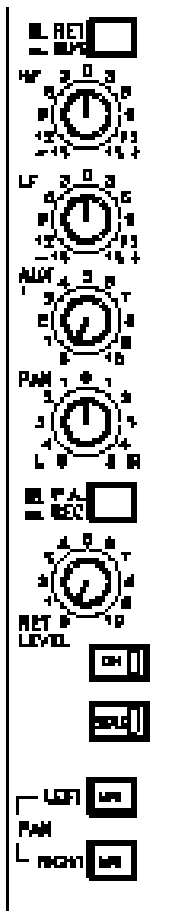

RETURN SECTION B

RET/BUS

This switch selects the input to the return section with its EQ. In the RET position, the input comes from the normal return input, is fed via the EQ, ON switch and PAN to the stereo mix. In the Bus position, the signal is taken from the group output, and fed as above to the stereo mix.

In the PA mode (described below) RET allows the return input to be used as an effects return with EQ. Selection of Bus sends the Return B input direct to its own group bus as an extender input to mix buses, and sends the group bus signal to mix with EQ, to use as an EQ'd sub-group to the mix with an auxiliary send.

If the console is being used for recording, this switch allows A/B monitoring of the tape send and track return signals. If the PA/RECORDING switch is set to Recording, the metering will follow the selection of Return or Bus on the input of the return section.

EQUALISER


The two band equaliser features +/- 15dB of gain at 8kHz PHF), and 60Hz PLF), with a shelving characteristic on each band.

AUX 1

The return signal (PB) can be fed to the Aux 1 bus via this level control, allowing the tape return signal to be fed to an external processing device or artist headphone monitoring system. The signal feed is taken pre- the level control, and is therefore unaffected by the position of the return level pot.

PAN

Positions the return signal within the stereo image, with a 4.5dB relative drop in the centre.

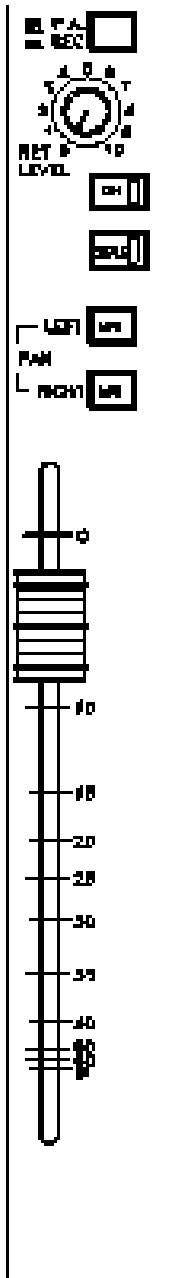

PA/RECORDING

This switch determines the way in which the return input is routed. In the PA mode, the metering will always read the group signal. If the Ret/Bus switch is also set to Bus at this time, the return input will take the group signal, and the external return signal will be routed to the same group bus. This is useful for adding in sub-mixers for example, a stereo feed of a mix of keyboards from another small console, which all then go off to the group output. If the switch is set to Recording, the signals follow the Ret/Bus switch selection, and no signals are routed from the return input back to the group buses.

RET LEV

This is the level control for the return signal, and adjusts the amount of level sent to the stereo mix.

SOLO

The return signal may be soloed to the monitoring system. This solo signal is pre the return level control. The led in the switch illuminates when solo is pushed.

ON

The ON switch enables the Return B signal to the stereo mix bus, and has led indication when enabled.

SUB-LEFT

This will route the group output signal to the left channel of the stereo mix bus.


SUB-RIGHT

This will route the group output signal to the right channel of the stereo mix bus.

If both SUB-LEFT and SUB-RIGHT are pressed, the signal will be fed via the Return 2 PAN pot to both left and right stereo buses. Note that in this case, Return B can not be used.

FADER

The long throw fader controls the level of the group output. When the SUB buttons are pressed, or BUS is selected, the fader will also control the level of the signal sent to the stereo mix.

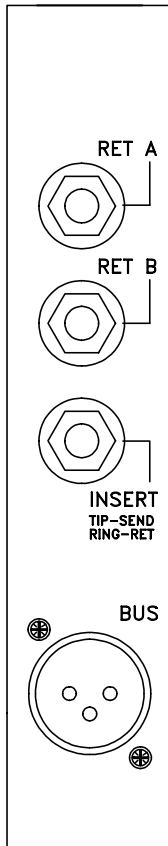


CONNECTORS AND PIN ASSIGNMENTS

Group Output Q 3 Pin XLR Type, Balanced
 Nominal Output LevelQ +4dBu Por -10dBV)
 Pin 2 Q Signal +ve P(Hot)
 Pin 3 Q Signal -ve P(Cold)
 Pin 1 Q Ground
 Output Impedance Q S75 Ohm

Aux/Return Input Q TRS Jack Socket, 3A Gauge, Balanced
 Nominal Input LevelQ +4dBu Por -10dBV)
 Tip Q Signal +ve P(Hot)
 Ring Q Signal -ve P(Cold)
 SleeveQ Ground
 Input Impedance Q >10 kOhm

Insert Point Q TRS Jack Socket, 3A Gauge, Unbalanced Nominal
 Input LevelQ -2dBu
 Tip Q Insert Send
 Ring Q Insert Return
 SleeveQ Ground
 Output Impedance Q S75 Ohm
 Input Impedance Q >10 kOhm

THE MATRIX OUTPUT MODULE

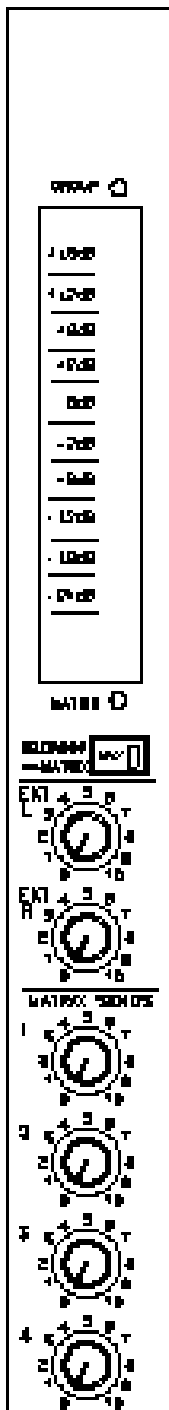

The Forum Matrix output module features the Group output (normally fader controlled), with a matrix sub-mix section comprising the group feed to the eight matrix buses, plus two external inputs to the matrix bus on that module. The Group output is normally controlled by a fader and the Matrix output by a rotary pot, but these two functions may be switch-reversed. Both Group and Matrix outputs are electronically balanced, and may be optionally transformer-balanced.

METER

The 20 segment LED meter indicates the level of the GROUP signal, unless the METER MATRIX button is depressed, in which mode it reads the level of the MATRIX output signal. The meter may be internally linked to show with either peak or VU characteristics.

METER MATRIX

This button changes the input to the meter from the group signal to the matrix signal.

EXTERNAL / L

This control adjusts the level of the External / Left input to the matrix bus on the module (Pie Bus 1 on Module 1). The sensitivity of this input is internally link selectable to be +4dBu or -10dBV.

EXTERNAL / R


This control adjusts the level of the External / Right input to the matrix bus on the module (Pie Bus 1 on Module 1). The sensitivity of this input is internally link selectable to be +4dBu or -10dBV.

1 This adjusts the level of the GROUP signal fed to the MATRIX bus 1. On Module 1, the matrix bus 1 is on the same module.

2 Adjusts the level of the GROUP signal fed to MATRIX bus 2.

3 Adjusts the level of the GROUP signal fed to MATRIX bus 3.

4 Adjusts the level of the GROUP signal fed to MATRIX bus 4.

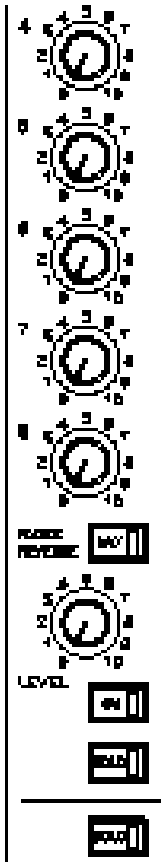

5 Adjusts the level of the GROUP signal fed to MATRIX bus 5.

6 Adjusts the level of the GROUP signal fed to MATRIX bus 6.

7 Adjusts the level of the GROUP signal fed to MATRIX bus 7.

8 Adjusts the level of the GROUP signal fed to MATRIX bus 8.

FADER MTRX

Normally the GROUP output is controlled by the long fader, and the MATRIX signal by the rotary potentiometer. Pressing FADER REVERSE changes the mode so that the fader now controls the MATRIX output, with the rotary pot controlling the GROUP output. This button has led indication.

MATRIX LEVEL

Adjusts the level of the MATRIX output signal fed to the XLR connector on the rear panel.

MATRIX ON


Enables the matrix output, with led indication.

MATRIX SOLO

Feeds the selected post-level control MATRIX signal to the SOLO system and Monitors, with led indication.

GROUP SOLO

Feeds the selected post-fader GROUP signal to the SOLO system and Monitors, with led indication.

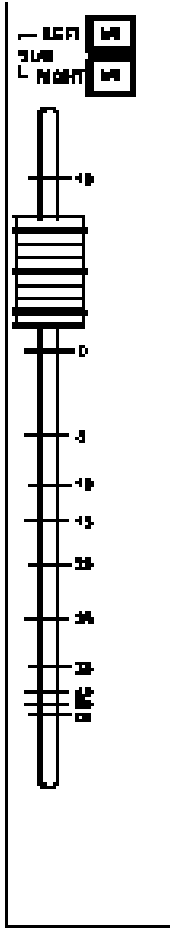

MIX/SUB L


Routes the GROUP signal to the main LEFT bus, post-fader.

MIX/SUB R

Routes the GROUP signal to the main RIGHT bus, post-fader.

FADER

Controls the output level of the GROUP signal, unless FADER REVERSE has been pressed, when it will control the level of the MATRIX output signal.

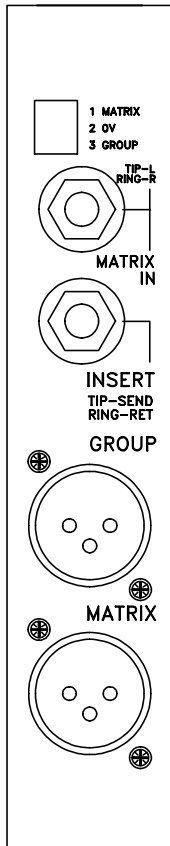

CONNECTORS AND PIN ASSIGNMENTS


Group Output Q 3 Pin XLR Type, Balanced
 Nominal Output LevelQ +4dBu
 Pin 2 Q Signal +ve P(Hot)
 Pin 3 Q Signal -ve P(Cold)
 Pin 1 Q Ground
 Output Impedance Q S75 Ohm

Matrix Output Q 3 Pin XLR Type, Balanced
 Nominal Output LevelQ +4dBu
 Pin 2 Q Signal +ve P(Hot)
 Pin 3 Q Signal -ve P(Cold)
 Pin 1 Q Ground
 Output Impedance Q S75 Ohm

Group Insert Point Q 1/4O TRS Jack Socket, 24 Gauge, Unbalanced
 Nominal Input LevelQ -2dBu
 Tip Q Insert Send
 Ring Q Insert Return
 SleeveQ Ground
 Output Impedance Q S75 Ohm Input Impedance Q >10 kOhm

External Input Q 1/4O TRS Jack Socket, 24 Gauge, Unbalanced
 Nominal Input LevelQ +4dBu Por -10dBV)
 Tip Q Signal 1 / Left
 Ring Q Signal 2 / Right
 SleeveQ Ground
 Input Impedance Q >10 kOhm

COMPOSER OUTPUT MODULE

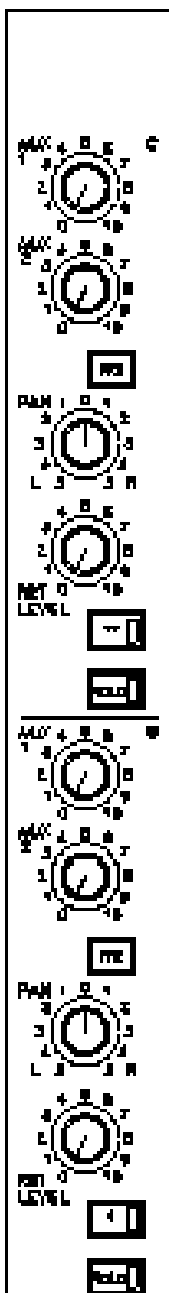

This module was fitted in the FORUM COMPOSER which is no longer available. This information is included for the sake of existing owners.

The Composer Output module provides control of the Group output signal, and monitoring of three tape returns. This provides 24-track monitoring on the eight group output modules.

On each module, one return is provided with a 2-band EQ section, and all returns have feeds to Auxiliary buses 1 and 2. All returns are automatically routed to the stereo mix bus.

TAPE RETURN 3 PTop section of module)

Tape Returns 3 and 2 are identical in operation. Only Tape Return 3 is described here.

AUX 1

Adjusts the amount of Tape 3 signal fed to Auxiliary bus 1. The signal is taken pre or post- the level control, depending on the position of the PRE/POST switch below the AUX 2 control.

AUX 2


Adjusts the amount of Tape 3 signal fed to Auxiliary bus 2. The signal is taken pre or post- the level control, depending on the position of the PRE/POST switch below the AUX 2 control.

PRE/POST

Takes the signal feed for the Auxiliary buses from before or after the return level control.

PAN

Adjusts the position of the Tape Return signal within the main stereo mix. When the PAN is hard left, full signal is sent to the left bus, and similarly for hard right. When the pan is in the centre, equal signal, approximately 4.5dB down, is fed to both left and right buses.

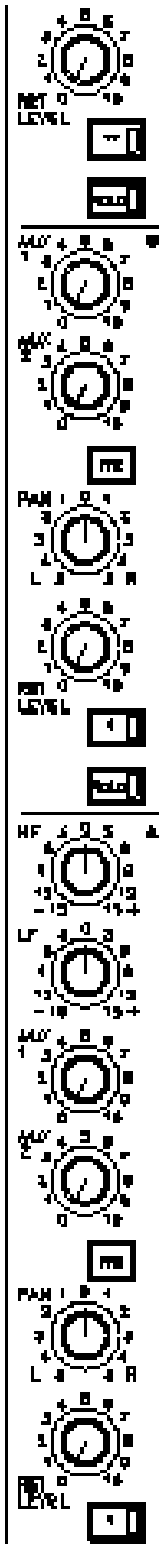

RET LEV

Controls the overall level of the Tape return feed to the stereo mix bus.

ON

When pressed (LED illuminated) the tape return signal is enabled, or ON.

SOLO

Feeds the tape return signal to the monitoring outputs and main stereo meters. The feed is internally selectable to be pre- or post- the level control.

TAPE RETURN 1

HF

A shelving high frequency equaliser section, with gain adjustable by +/-15dB, at a fixed frequency of 12kHz.

LF

A shelving low frequency equaliser section, with gain adjustable by +/-15dB, at a fixed frequency of 80Hz.

AUX 1

Adjusts the amount of Tape 1 signal fed to Auxiliary bus 1. The signal is taken pre or post- the level control, depending on the position of the PRE/POST switch below the AUX 2 control.

AUX 2


Adjusts the amount of Tape 1 signal fed to Auxiliary bus 2. The signal is taken pre or post- the level control, depending on the position of the PRE/POST switch below the AUX 2 control.

PRE/POST

Takes the signal feed for the Auxiliary buses from before or after the return level control.

PAN

Adjusts the position of the Tape Return signal within the main stereo mix. When the PAN is hard left, full signal is sent to the left

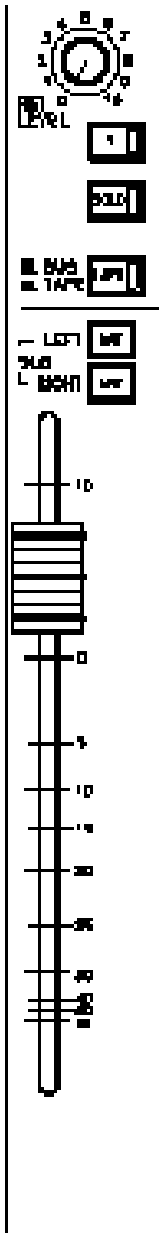

bus, and similarly for hard right. When the pan is in the centre, equal signal, approximately 4.5dB down, is fed to both left and right buses.

RET LEV

Controls the overall level of the Tape return feed to the stereo mix bus.

SOLO

Feeds the tape return signal to the monitoring outputs and main stereo meters. The feed is internally selectable to be pre or post the level control.

TAPE

Selects the Tape 1 Return signal to the monitoring section, instead of the BUS output. The led illuminates when TAPE is selected.

MIX L


Routes the BUS P(group) signal to the stereo mix left channel.

MIX R

Routes the BUS P(group) signal to the stereo mix right channel.

FADER

The long-throw fader always controls the level of the Group BUS output signal to tape.

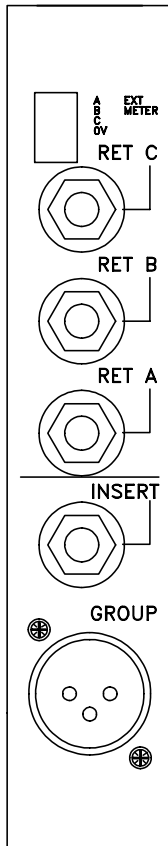


CONNECTORS AND PIN DEFINITIONS

Group Output Q 3 pin XLR type, balanced
 Nominal Output Level Q +4dBu P-10dBV)
 Pin 2 Q Signal +ve P(Hot)
 Pin 3 Q Signal -ve P(Cold)
 Pin 1 Q Ground
 Output Impedance Q 575 Ohm

Tape Returns Q 1/4O TRS Jack Socket, 6Aí Gauge, balanced
 Nominal Input Level Q +4dBu P-10dBV)
 Tip Q Signal +ve P(Hot)
 Ring Q Signal -ve P(Cold)
 Sleeve Q Ground
 Input Impedance Q >10 kOhm

Group Insert Q 1/4O TRS Jack socket, 6Aí Gauge, unbalanced
 Nominal Input Level Q -2dBu
 Tip Q Insert Send
 Ring Q Insert Return
 Sleeve Q Ground
 Output Impedance Q 575 Ohm
 Input Impedance Q >10 kOhm

STEREO MASTER MODULE

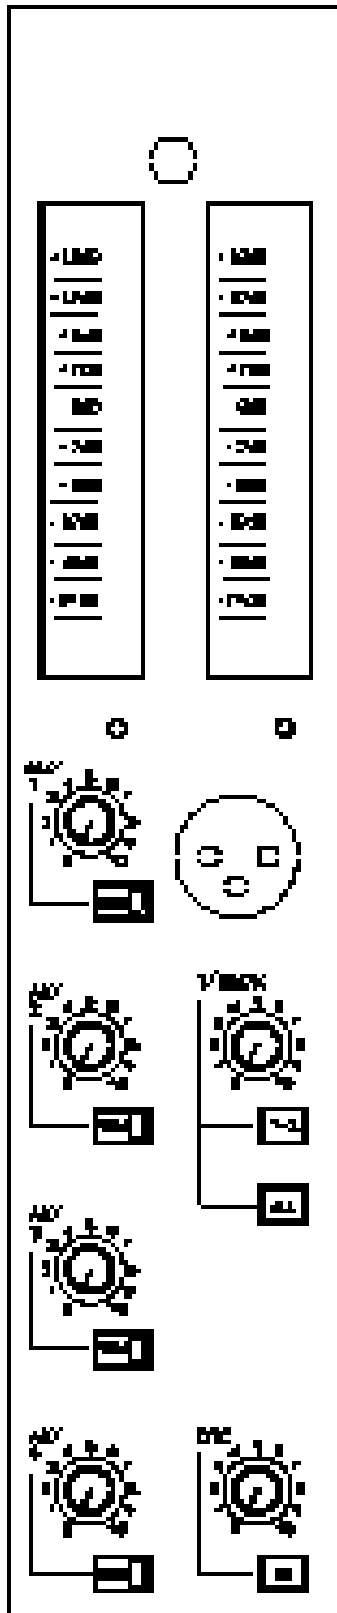

The Stereo Master module contains the main stereo outputs, the Auxiliary master outputs, the monitoring section, and talkback microphone input. In addition, a BNC connector is provided for a gooseneck light if the console is to be operated under low or poor light conditions (Maximum power 12 Volts, 5 watts). In consoles where mute input modules are fitted the master module will also have the master mute group switches located on it.

The main stereo outputs have delayed-turn-on circuitry to prevent potential damage caused to speakers by transients. The stereo outputs are electronically balanced, and may also be transformer balanced as a cost option.

Insert points are provided in the stereo output signal and plugging in the jack automatically breaks the normal signal path and inserts the external equipment.

The Stereo Mix, Group, and Auxiliary outputs have a nominal operating level of +4dBu, with the facility to interface at -10dBV. All these main outputs may be fitted with transformers.

LED Metering

The two led bargraph meters follow under normal operating conditions the output of the stereo mix. If any SOLO button is pressed, they show the level of the soloed signal, in mono.

SET 0

These sub-panel presets are used to calibrate the led meters for 0dB signal.

AUX 1


This adjusts the master output level of the Auxiliary 1 bus.

AFL 1

Pressing the associated AFL button will send the auxiliary 1 signal, at whatever level the master is set, to the main monitoring system, overriding the stereo signal on the monitors, and meters. The main stereo output is not affected.

AUX 2-6/AFL 2-6

The five other Auxiliary master level controls and associated AFL button operate in the same way as the Aux 1 controls.

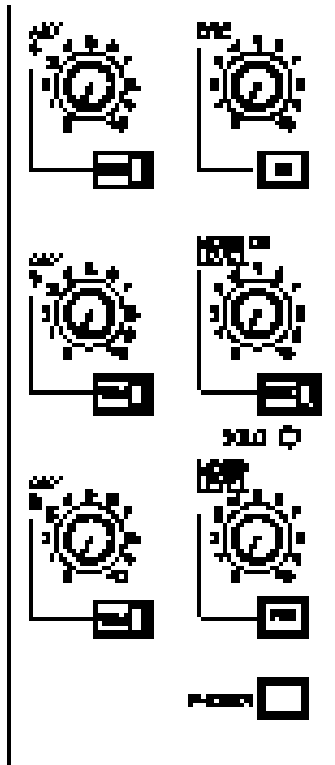

TALKBACK MIC

A microphone may be plugged in to this socket to provide talkback facilities to the output buses for artists or tape. The microphone may be a Dynamic type, or using an internal link for phantom powering, may be a condenser microphone.

TB GAIN

This adjusts the level of the talkback microphone signal.

1-2 / AUX

If 1-2 is pressed, the talkback microphone signal is sent to the Auxiliary 1 and 2 buses. If these buses are being used as artists headphone feeds, this switch allows the engineer to talk directly to the artist via the headphones. To avoid feedback the control room output is muted when talkback is used.

ALL

If the ALL button is pressed, the talkback microphone signal is sent to all the main outputs, including all auxiliary buses, group outputs and the stereo mix, for use in global announcements. The control room monitor outputs are muted completely when ALL is pressed.

OSC LEVEL

This pot controls the level of the internal tone oscillator, which may be used for signal path testing or equipment alignment. The oscillator operates at a frequency of 1kHz.


ON

Switches on the oscillator for use as above, and routes the oscillator signal to all the buses Q stereo mix, auxiliary outputs and group outputs. If either of the Talkback assign switches are pressed, the oscillator signal is overridden.

MONITOR LEVEL

This controls the level of the control room monitoring system. The signal feed to the monitoring system is selected from the stereo mix output, an external stereo input Pfor example, a master stereo tape machine), or any signal on the mixer which is SOLO'ed.

The output Pcontrol room) will feed an external power amplifier and speakers. Alternatively, stereo headphones may be used via the headphone jack on the front panel of the master module.

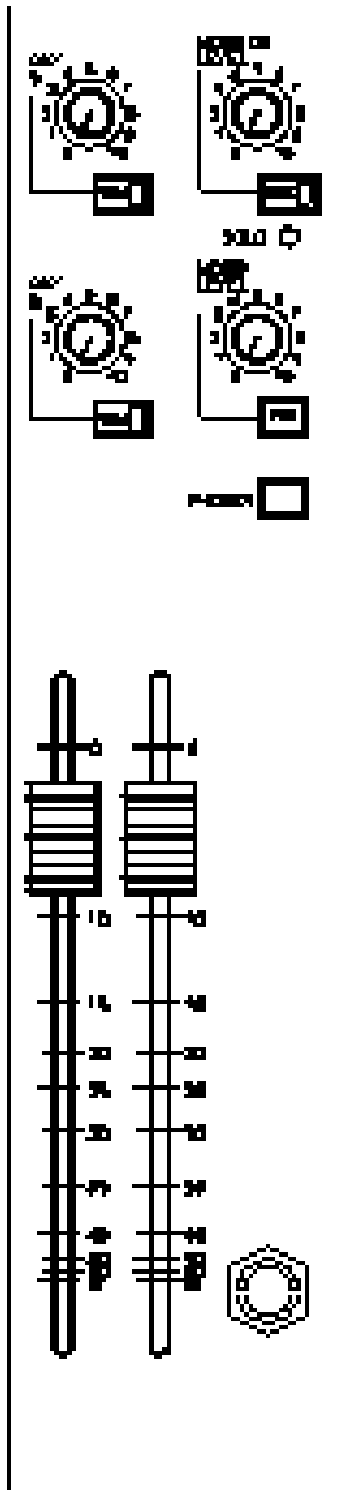

MIX/2 TRK

This switch selects the input to the monitoring system, from the stereo mix output or the external stereo input (P2 Track).

Selection of any SOLO/AFL signal will override the MIX/2 Track selection. The 10 way selector module may be connected to the 2 track input to increase the range of available sources.

PFL/AFL

If any SOLO or AFL button is pressed, this led will light to show that a signal has been soloed.

MONO LEVEL

There is a separate mono output available which is a sum of the stereo mix output, and can be taken as a pre-or post-master fader feed, with its own level control.


PRE

When the switch is up, the mono sum is taken after the main stereo faders. When depressed, the signal is taken pre-fader, so is unaffected by the master fader positions. HEADPHONE/MON As well as to its own output connector, the mono signal can be fed to the control room monitor outputs or the headphones.

FADERS

Independent left and right main faders are provided, allowing smooth control and balancing of the stereo output signal.

HEADPHONES Stereo headphones with impedances from 100 ohms to 600 ohms may be plugged into the headphone socket.

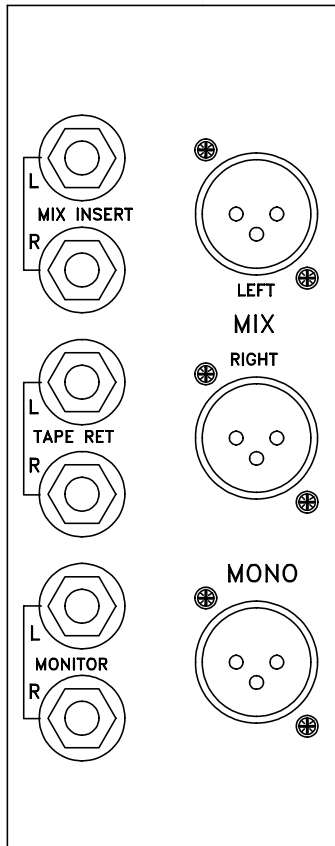

CONNECTORS AND PIN DEFINITIONS

Mix Output Q 3 Pin XLR type, Balanced
 Nominal Output LevelQ +4dBu Por -10dBV)
 Pin 2 Q Signal +ve P(Hot)
 Pin 3 Q Signal -ve P(Cold)
 Pin 1 Q Ground Output Impedance Q S75 Ohm

Mono Output Q 3 Pin XLR type, Balanced
 Nominal Output LevelQ +4dBu Por -10dBV)
 Pin 2 Q Signal +ve P(Hot)
 Pin 3 Q Signal -ve P(Cold)
 Pin 1 Q Ground
 Output Impedance Q S75 Ohm

Tape Return Inputs Q TRS Jack Socket, 3A Gauge, Balanced
 Nominal Input LevelQ +4dBu Por -10dBV)
 Tip Q Signal +ve P(Hot)
 Ring Q Signal -ve P(Cold)
 SleeveQ Ground
 Input Impedance Q >10 kOhm

Insert Points Q 1/40 TRS Jack socket, 3A Gauge, Unbalanced
 Nominal Input levelQ -2dBu
 Tip Q Insert Send
 Ring Q Insert Return
 SleeveQ Ground
 Output ImpedanceQ S75 Ohm
 Input ImpedanceQ >10 kOhm

Control Room Outputs Q 1/40 TRS Jack socket, 3A Gauge,
 Nominal Output levelQ +4dBu Ground compensated
 Tip Q Signal +ve P(Hot)
 Ring Q Ground Compensated signal -ve
 SleeveQ Ground
 Output ImpedanceQ S75 Ohm

Headphone Output Q TRS Jack Socket, 3A Gauge
 Nominal Output levelQ +14dBu
 Tip Q Left Channel
 Ring Q Right Channel
 SleeveQ Ground

GENERAL SERVICING

Servicing should be referred to factory personnel, or your authorized DDA distributor.

If you require to remove a module then follow the steps below.

Remove the upper and lower identification strips by pulling carefully up at one end, then along, unclipping each section very carefully.

Remove three screws which hold the module in place located at the bottom, top, and rear, near the bottom of the connector panel.

To remove the module, lift the bottom of the panel, then pull the module back about 2cms. so that the top is disengaged from the frame.

Unplug the ribbon cable from the module along with any earth wires that may be attached.

Replacement is a reversal of the above.


POWER SUPPLY

The FORUM power supply is a rack mounting unit, occupying 2U of rack space. The unit is fan cooled but should still be given adequate ventilation and air circulation when installed.

The AC mains input to the power supply can be between 90 volts and 240 volts 50 - 60Hz AC, with the operating voltage set by internal switches.

There are four internal switches which determine the operating voltage of the unit. **DO NOT CONNECT THE POWER SUPPLY TO THE MAINS WITHOUT CONFIRMING YOUR VOLTAGE SETTING.**

Use a screwdriver to move the switches to the correct setting.

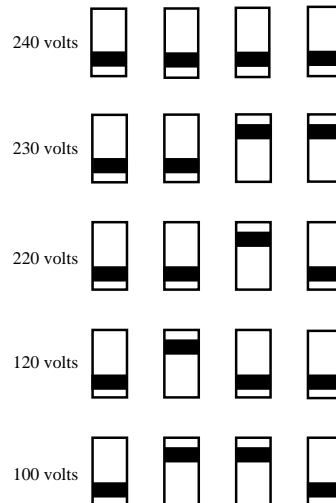

The DC output voltages are +17V, -17V and +48V.

The fuse ratings areQ

240/230/220	T3.15A
120/100/90	T6.3A

NOTE. The PSU has a ground lift switch, which when operated, can leave the console floating with respect to ground.